



UNBOXING

BC150 LOUDSPEAKER

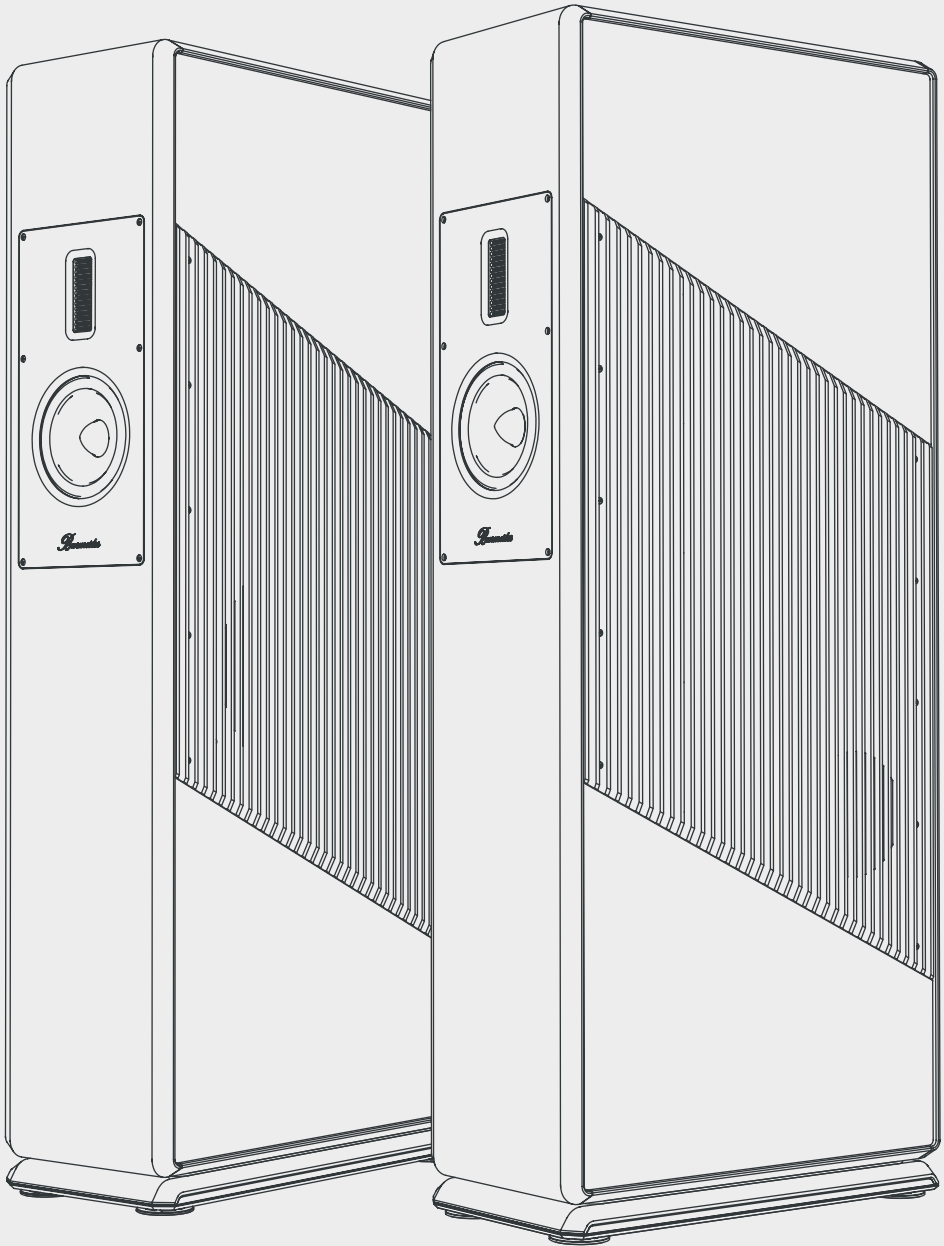

*Burmester*

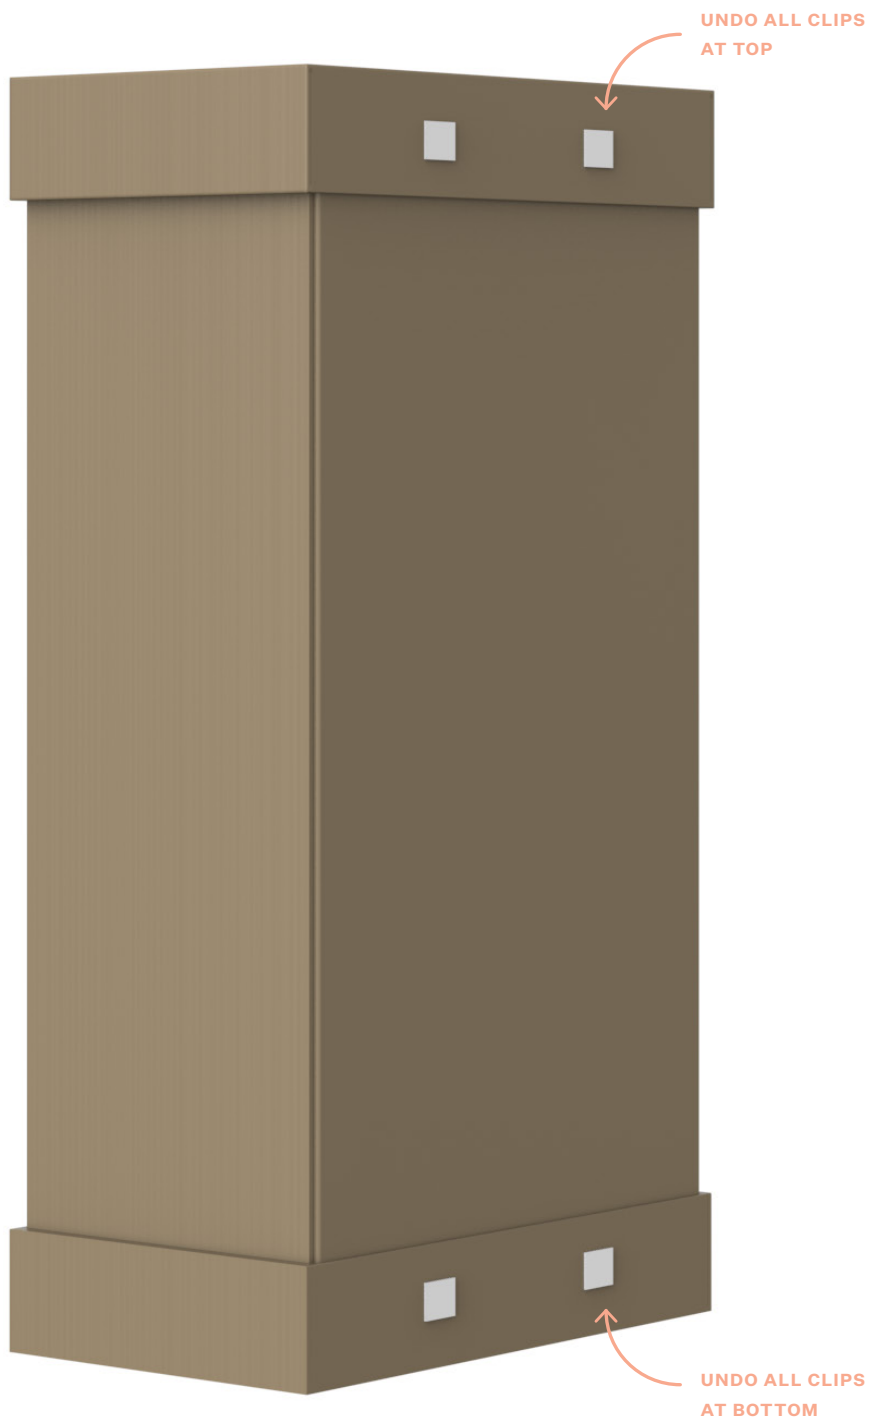

BC150 LOUDSPEAKER IN ORIGINAL PACKAGING

# Unpacking the loudspeakers

 **ARRANGE FOR A PROFESSIONAL TO CARRY OUT THIS STEP!**

## STEP 1: SETUP


Move the loudspeaker to where you want it to be positioned in your room. Make sure that the surface on which you want to place it is flat and stable. For details of the correct setup position, see page 20 onwards in the operation manual.




### CAUTION: RISK OF INJURY

The loudspeakers are very heavy and may cause serious injury if they tip over or fall.

- The loudspeakers should only be unpacked and set up by professionals who are experienced in handling heavy loads.

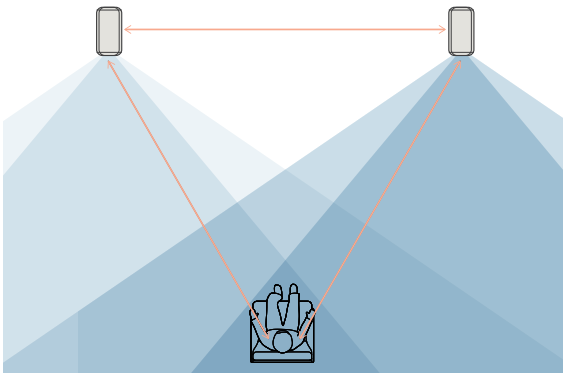

SPEAKER FRONTS PARALLEL TO THE WALL

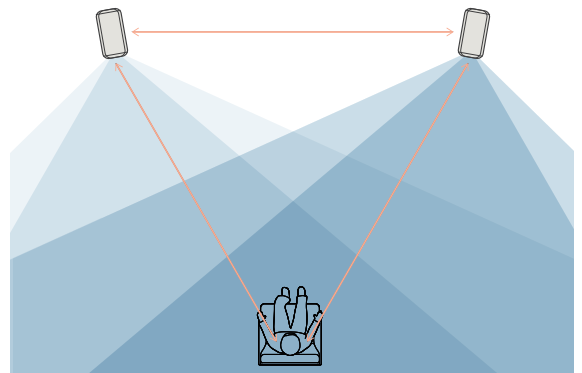


SPEAKERS POSITIONED AT AN ANGLE

## STEP 2: UNDOING THE CLIPS

Undo and remove the white clips on the top and bottom of the box.

**STEP 3: REMOVING THE TOP SECTION OF THE PACKAGING**

- 3.1 Take the lid off the box and remove the middle section of the packaging box.
- 3.2 Remove the foam lid and the foam ring around the middle of the speaker.

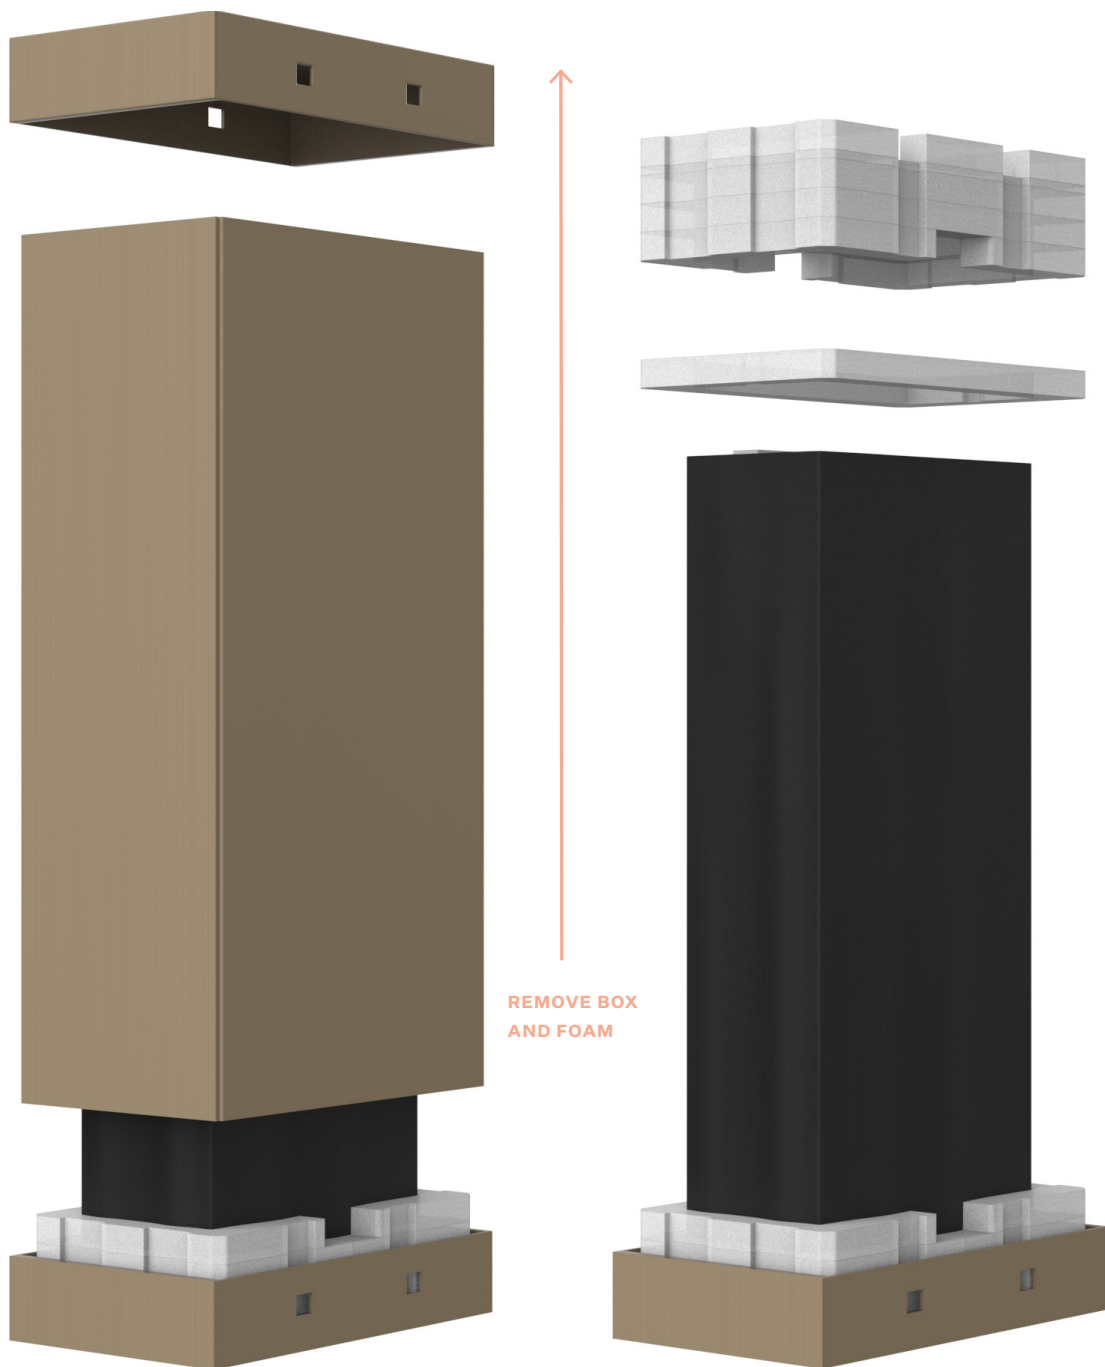


STEP 3.1


STEP 3.2

**STEP 4: REMOVING THE BOTTOM SECTION OF THE BOX**

- 4.1 Open the bottom section of the box at the short end.
- 4.2 Carefully push the speaker off the box.

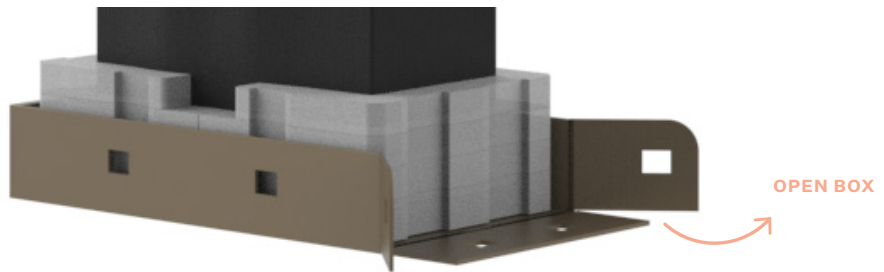

STEP 4.1

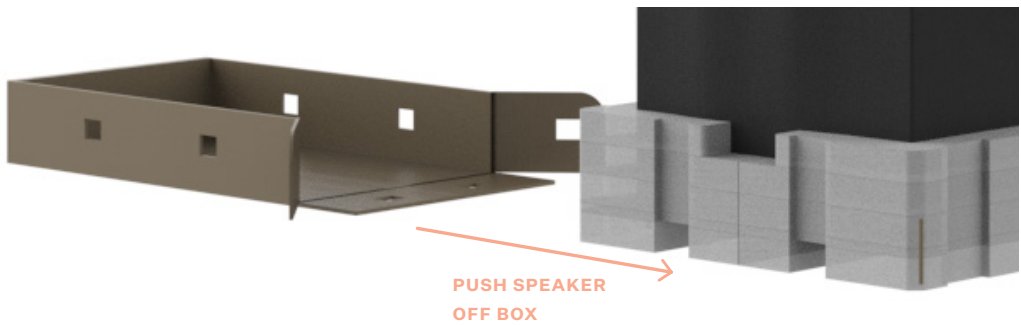

STEP 4.2


**ATTENTION: ENSURE THE SPEAKER IS STABLE!**

The foam protection at the base of the speaker comes in two parts, and can lose its stability once the box has been removed.

→ Stabilise the speaker and do not leave it standing freely in your room.

**STEP 5: REMOVING THE FOAM FROM THE BOTTOM OF THE SPEAKER**

- 5.1 Once you have pushed the speaker halfway off the box, tilt it slightly and remove one half of the foam.

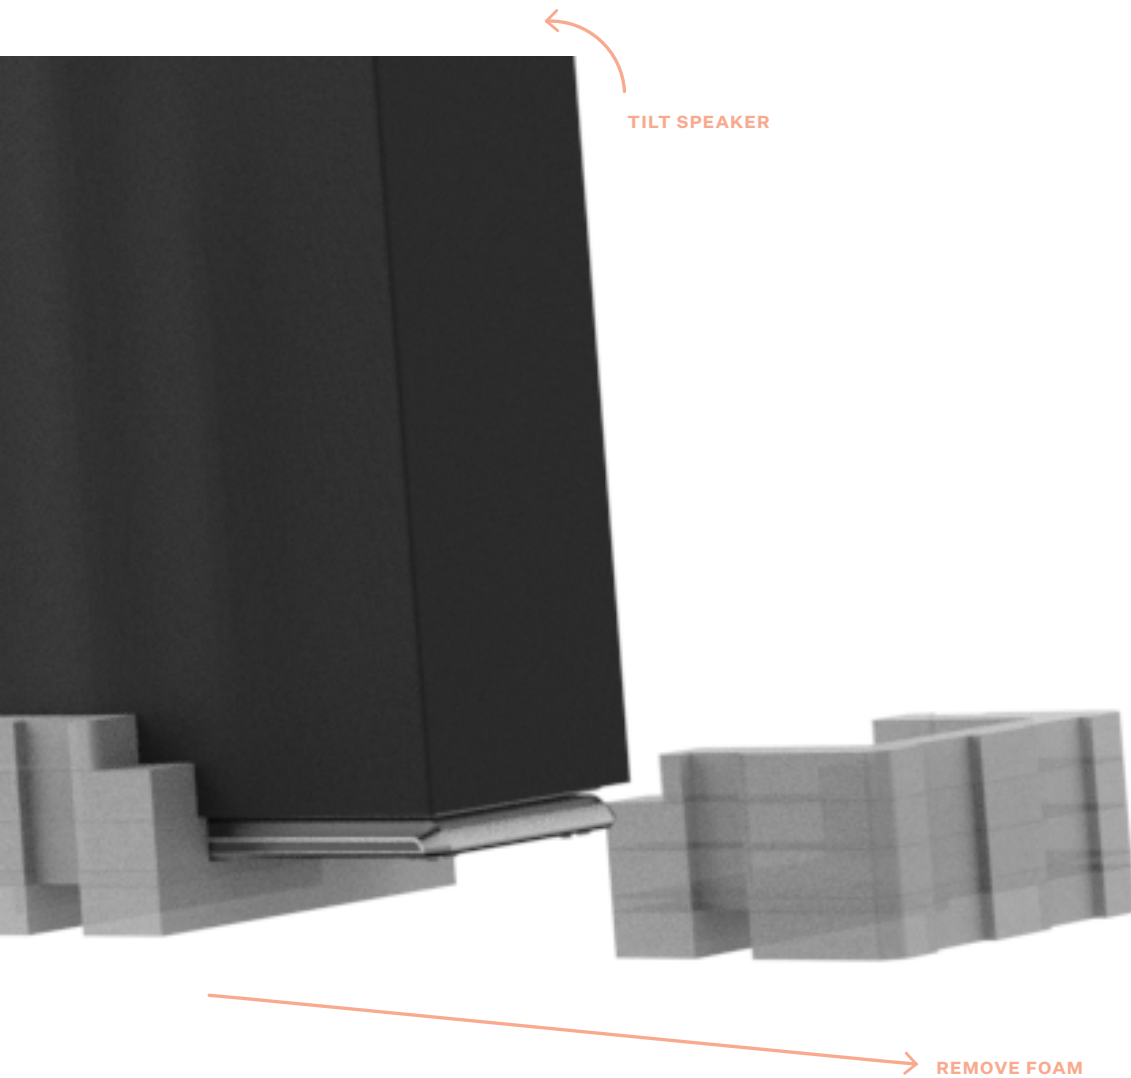

STEP 5.1


- 5.2 Tilt the speaker slightly in the opposite direction and remove the other half of the foam.



**TIP: PROTECTING YOUR LOUDSPEAKER**

You should protect the edges of the speaker before tilting it the second time.

- Place a cloth or towel under the unprotected side of the base before tilting the speaker in the opposite direction.

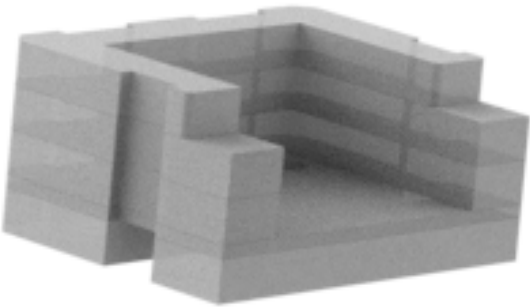

STEP 5.2





**STEP 6: REMOVING THE SPEAKER COVERS**

Remove the covers by pulling them up and over the loudspeaker. If necessary, correct the position of the feet using the enclosed wrench (see operation manual, page 20 onwards).

**THE SPEAKER IS NOW READY TO BE CONNECTED TO YOUR SOUND SYSTEM**

For details on how to connect your speakers properly, see page 24 onwards of the operation manual.

**STEP 7: SECOND SPEAKER**

To set up the second loudspeaker, repeat steps 1 to 6.

**WE RECOMMEND KEEPING THE ORIGINAL PACKAGING FOR FUTURE TRANSPORT; E.G. IF YOU MOVE HOME.**

**BURMESTER HOME AUDIO GMBH**

Wilhelm-Kabus-Straße 47  
10829 Berlin  
Germany

[www.burmester.de](http://www.burmester.de)

# Pure Sound

HANDMADE BY BURMESTER

*Burmester*